

Product safety information

Wall Clock Central Park Black Ø30cm

EAN: 4025621557821



KARE
DESIGN

Email: help@kare.de
KARE Design GmbH
Zeppelinstraße 16,
85748 Garching-Hochbrück
Germany


www.kare.de www.kare-design.de

113-03-20

size:21x14.85cm

KARE DESIGN

52052/52053/52054	Wall Clock Leonardo	53655	Wall Clock Andrea
53212/53213	Wall Clock Mailo	53689	Wall Clock Bruno
53214	Wall Clock Levi	55782	Wall Clock Central Park
53215 /53216	Wall Clock Lio	55787	Wall Clock John
53211/53224	Wall Clock Oscar	56166/56167	Wall Clock Felice
53654	Wall Clock Luca	56169	Wall Clock Milk Bar

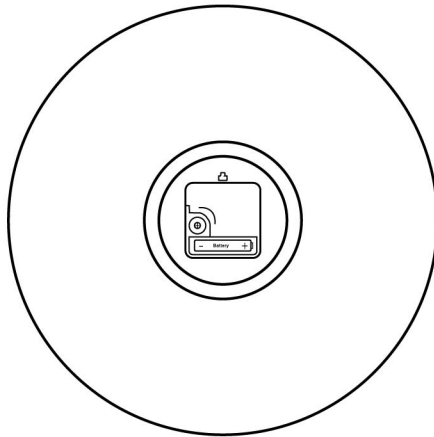

INSTRUCTION

A. TO START THE CLOCK : DIE UHR EINSCHALTEN

PUT 1 X AA with polarity as indicatcd into battery room.

Liegen Sie 1xAA-Batterie, unter Beachtung der angegebenen Polaritat in das Batteriebach ein.

B. TO SET TIME/ ZEITEINSTELLUNG

Turn the hour/minute adjuster in clockwise.

Bewegen Sie die stunden- / Sekundenzeiger im Uhrzeigersinn

NOTE : HINWEIS

If the time keeping suddenly fluctuate replace the battery.

If the clock is not in use remove the battery.

Wechseln Sie die Batterie wenn die Uhrzeit nachgeht.

Nehmen Sie die Batterie heraus wenn Sie die Uhr nicht nutzen.

BRAVO !