








ASSEMBLY INSTRUCTION

PALMDALE CHAIR

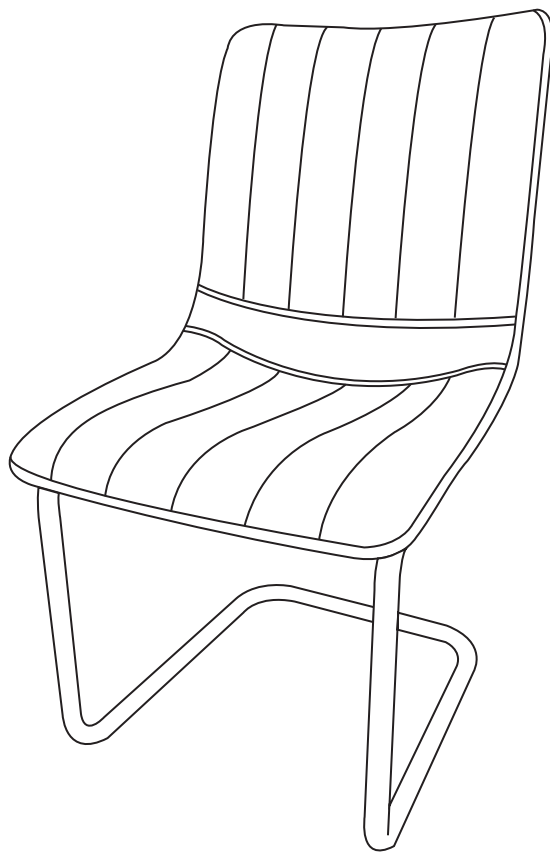

ROWICO

H O M E

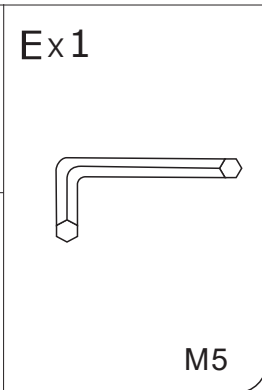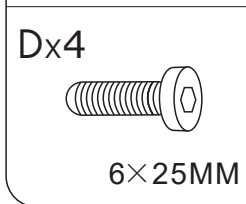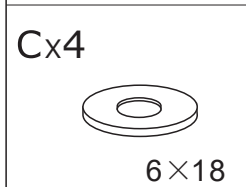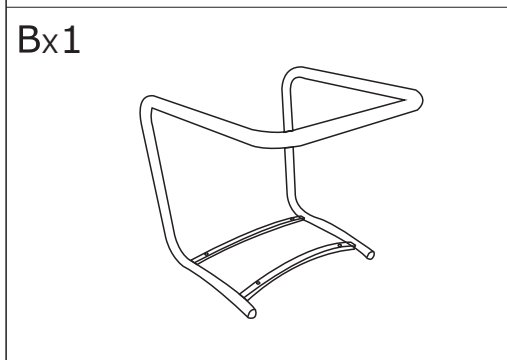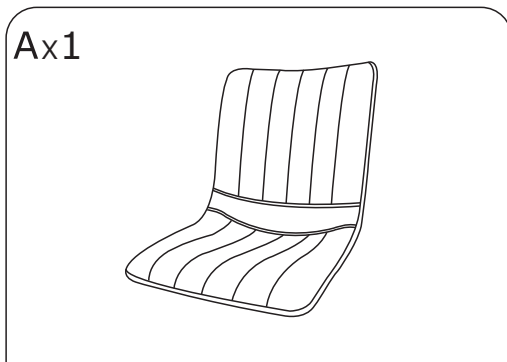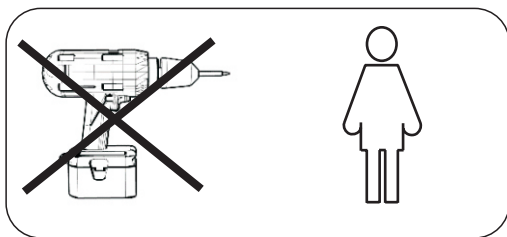

1

